


BANAK

SANDOLI


SD-0102RM

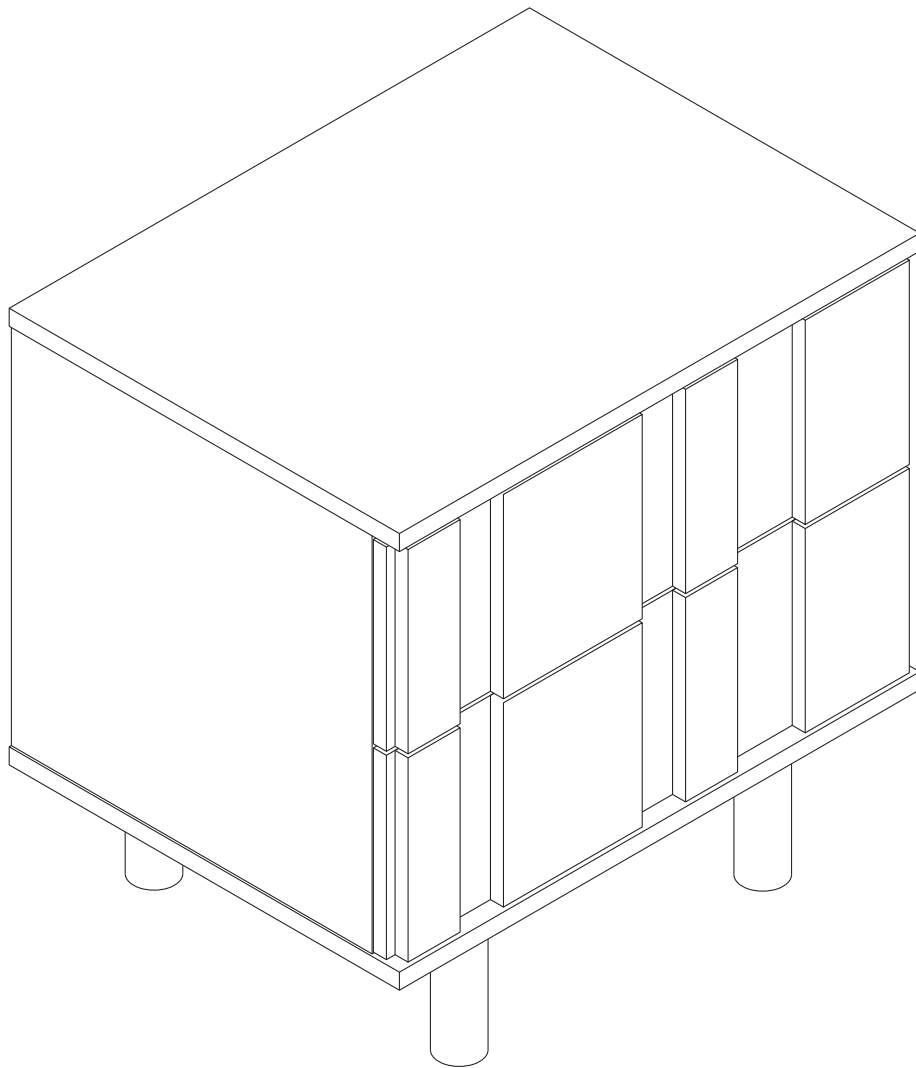


BANAK

SANDOLI


SD-0102RM




1 600 x 450 x 15
(1x)

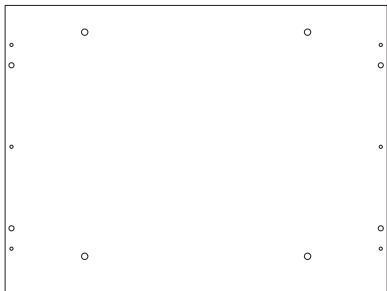


2 600 x 450 x 15
(1x)




3 583 x 419 x 18
(1x)

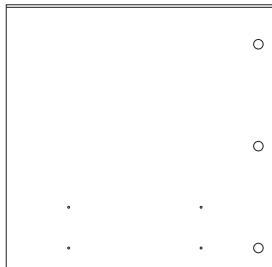


4 420 x 416 x 15
(1x)

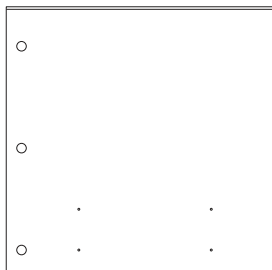


5 420 x 416 x 15
(1x)




6 524 x 334 x 3
(2x)

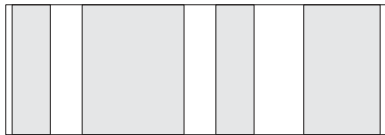


7 598 x 204 x 30
(2x)




8 350 x 140 x 14
(2x)



9 350 x 140 x 14
(2x)



10 512 x 140 x 14
(2x)



11 512 x 140 x 14
(2x)




12 150 x Ø47
(4x)


BANAK

SANDOLI


SD-0102RM



Ø8x20 mm
A x 8 PC




Ø8x30 mm
B x 8 PC




3,5x12 mm
C x 20 PC




3,5x16 mm
D x 4 PC



4,0x30 mm
E x 28 PC



4,0x40 mm
F x 6 PC



7,0x50 mm
G x 4 PC




7,0x32 mm
H x 6 PC




Ø15x11 mm
I x 6 PC



J x 1 PC



K x 4 PC

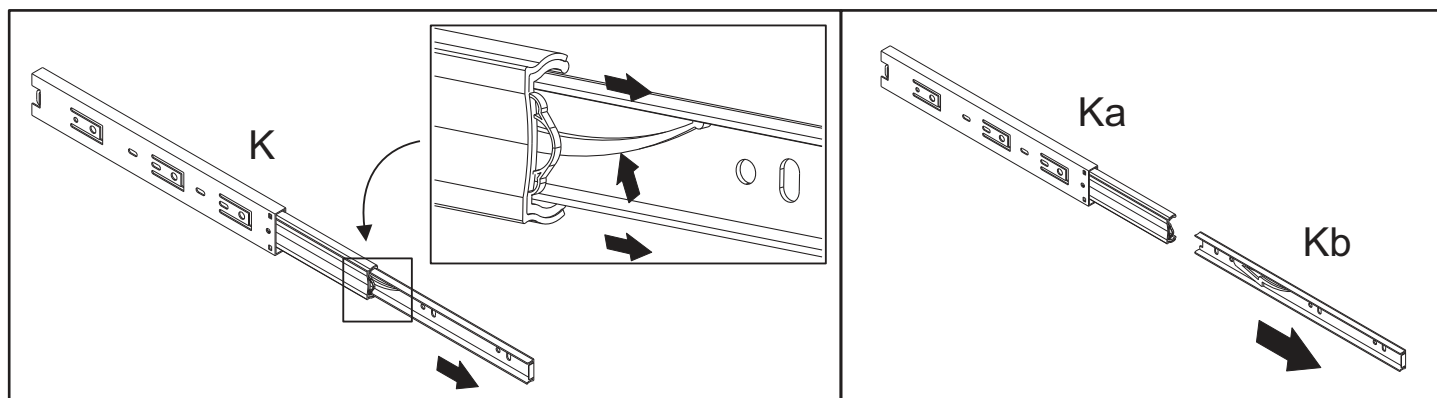


BANAK


SANDOLI

SD-0102RM

1




B x 8 PC

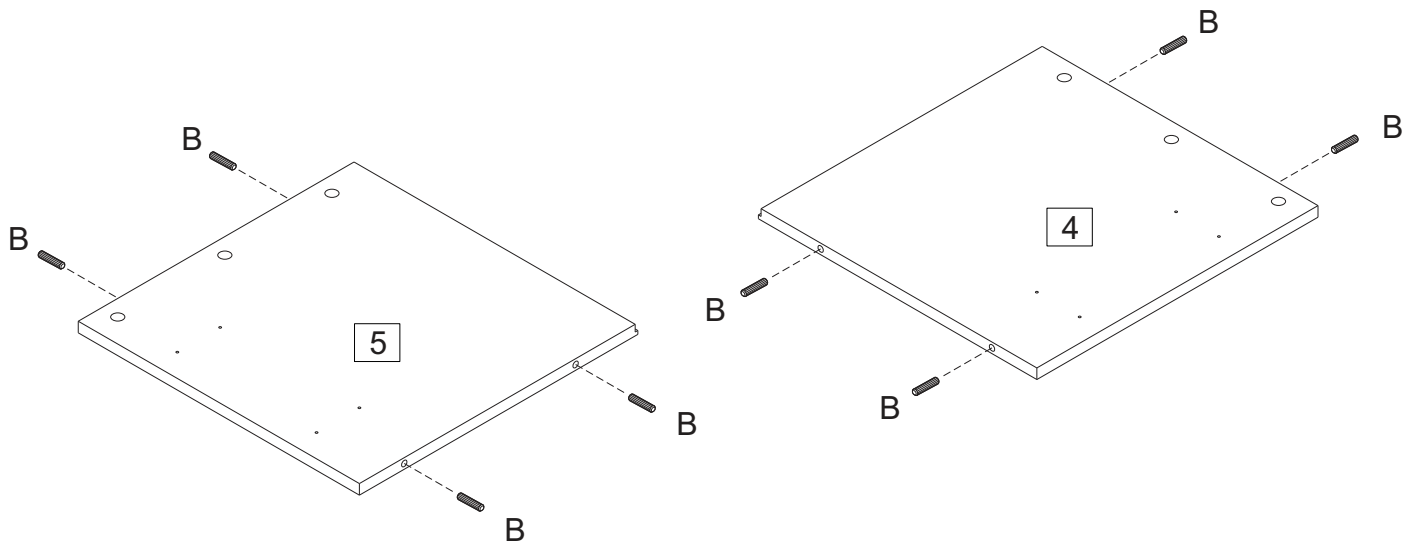


2



C x 12 PC



Ka x 4 PC

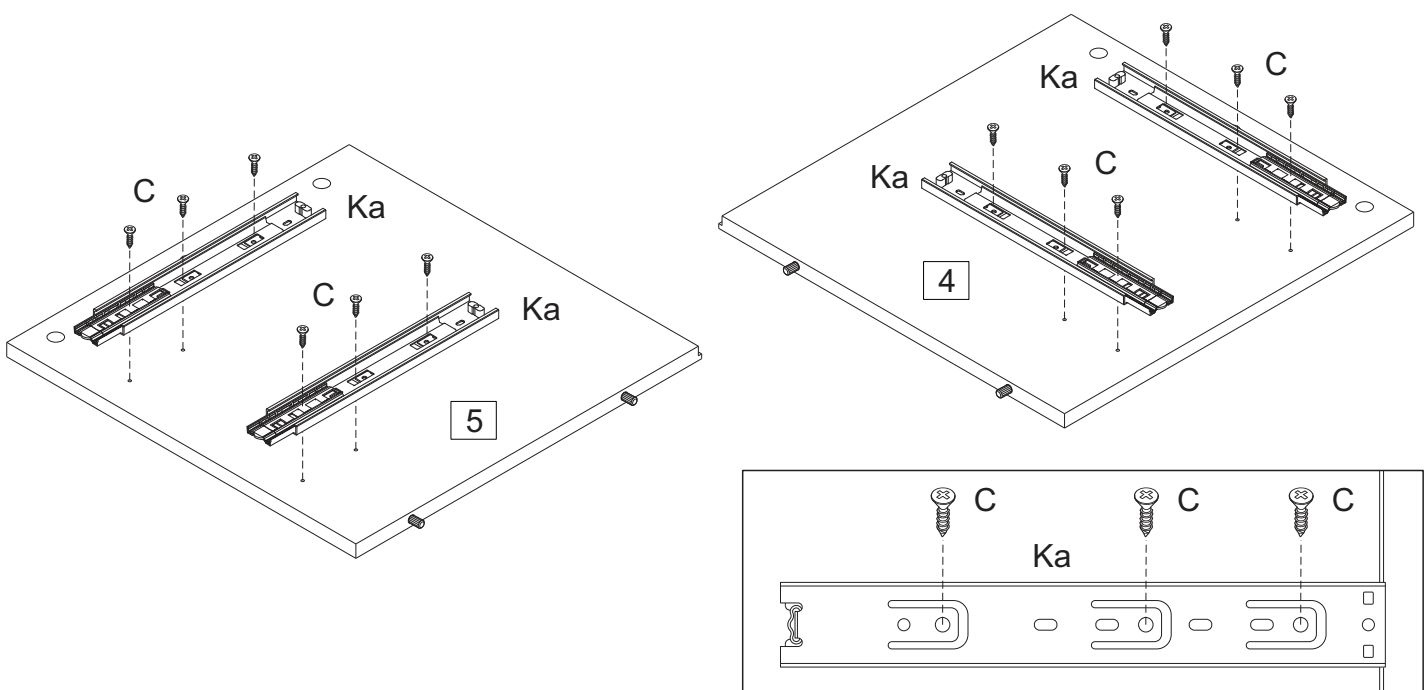

BANAK




SANDOLI

SD-0102RM


3



H x 6 PC

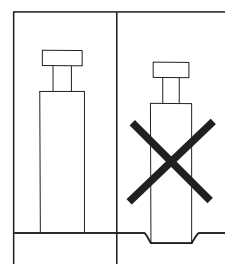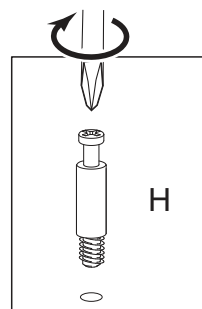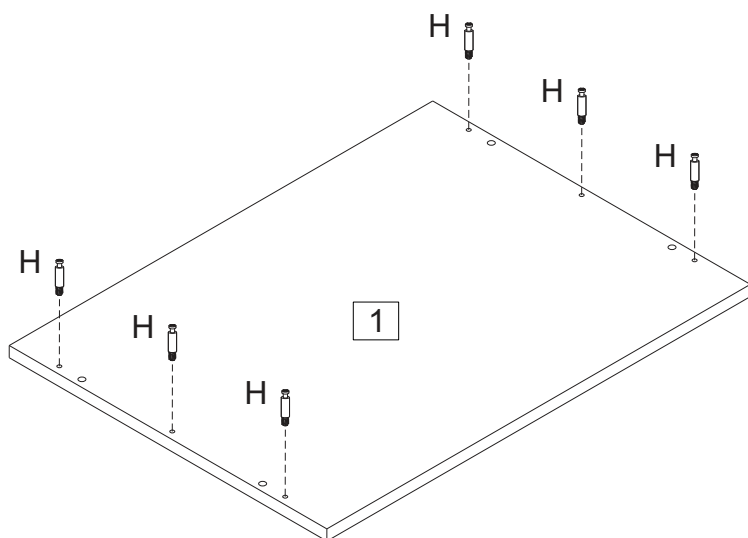



4



G x 4 PC



J x 1 PC

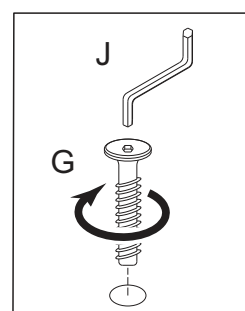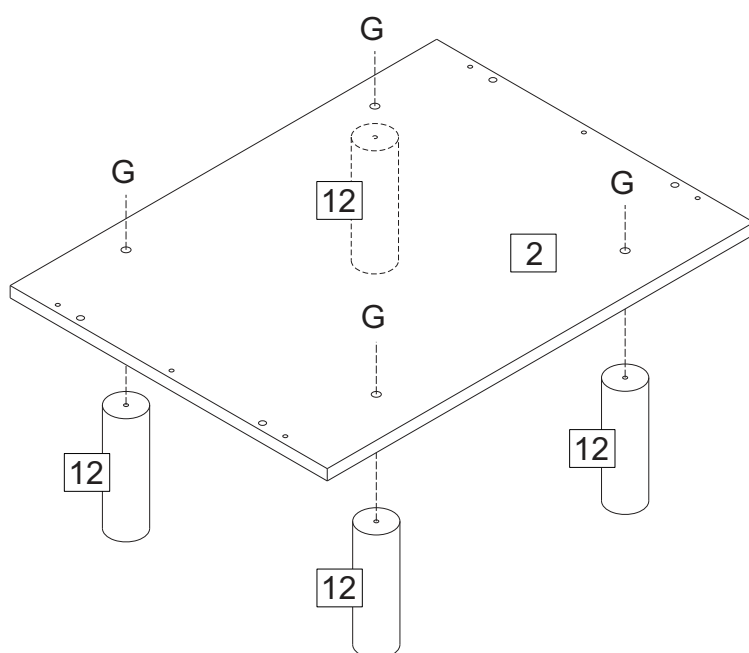

BANAK



SANDOLI

SD-0102RM


5





I x 6 PC

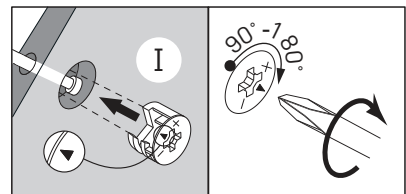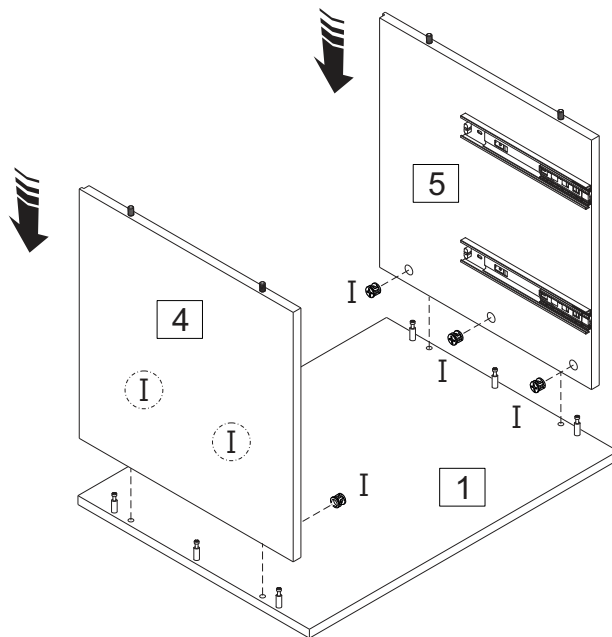

6



F x 6 PC

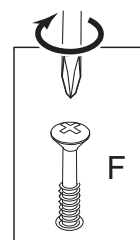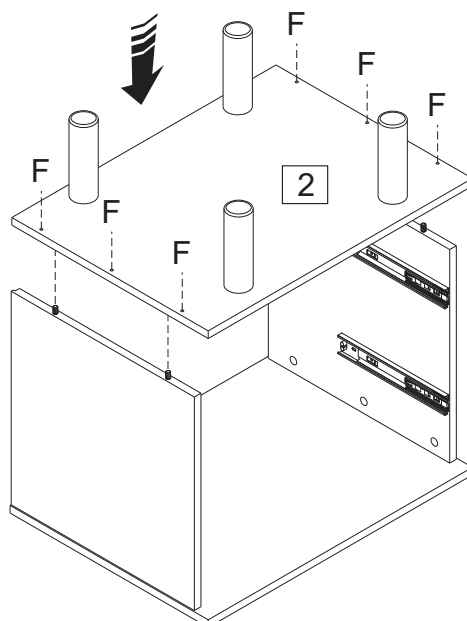


BANAK


SANDOLI

SD-0102RM


7




D x 4 PC

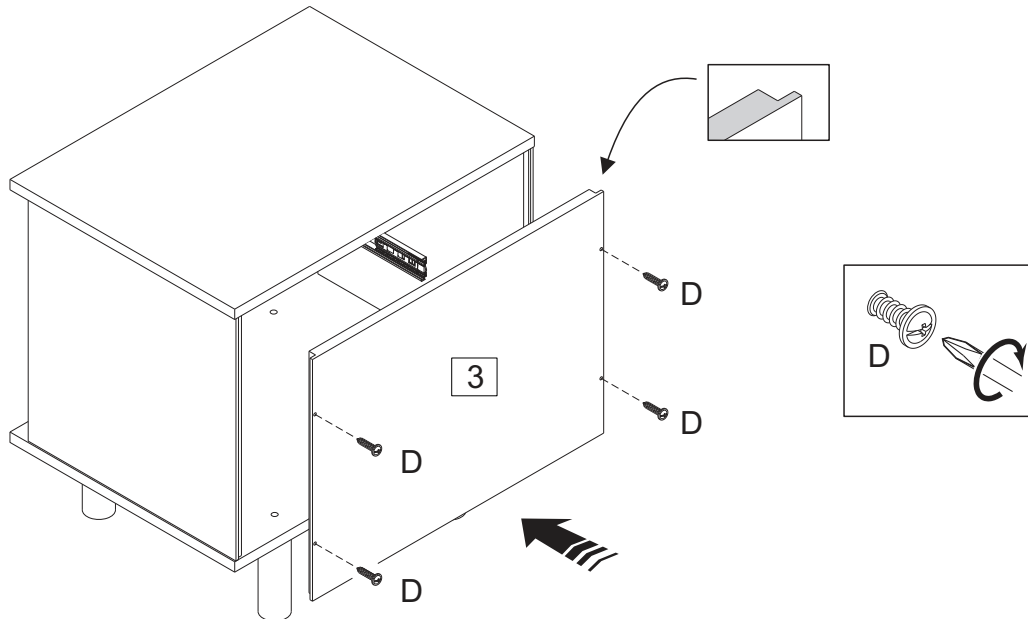


8



A x 8 PC




E x 12 PC

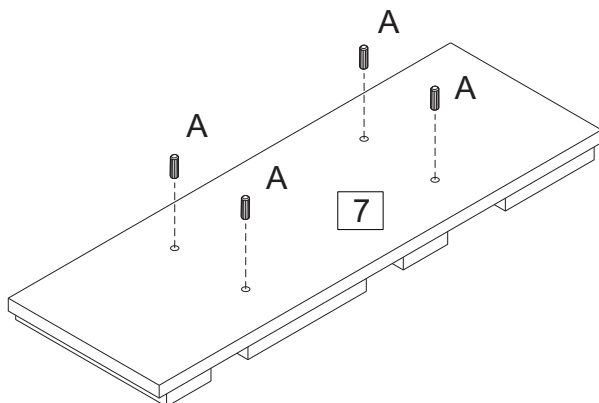

Important!

Do not press wooden
dowel too much!

2x

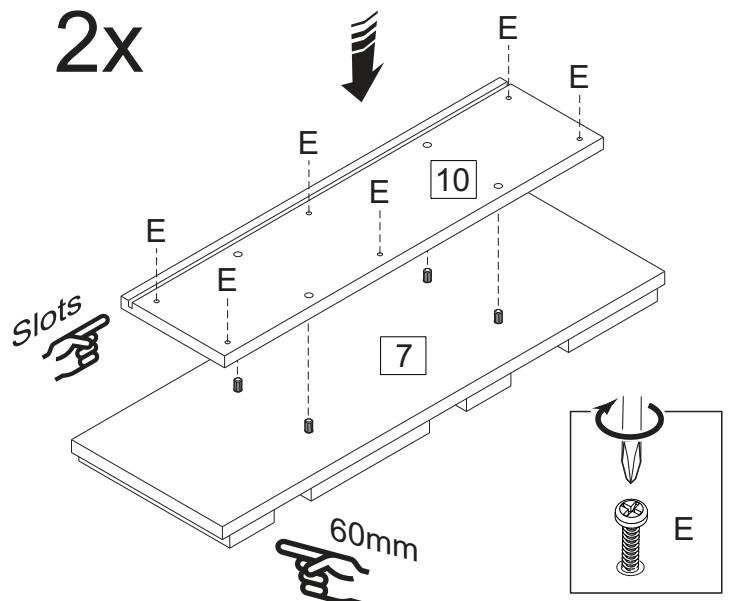


BANAK


SANDOLI

SD-0102RM



9



E x 16 PC

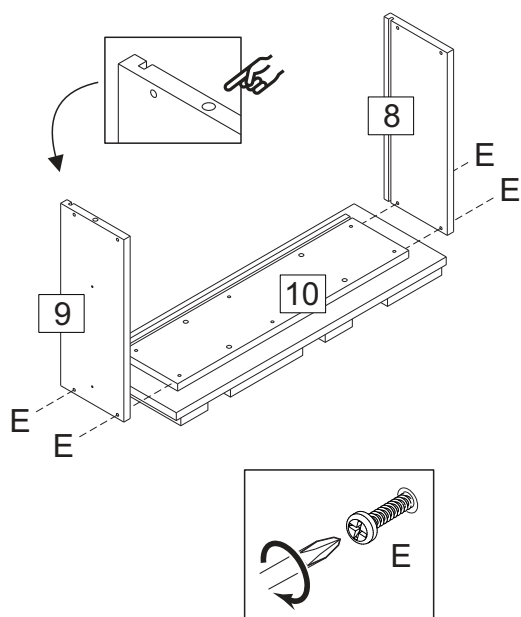

2x

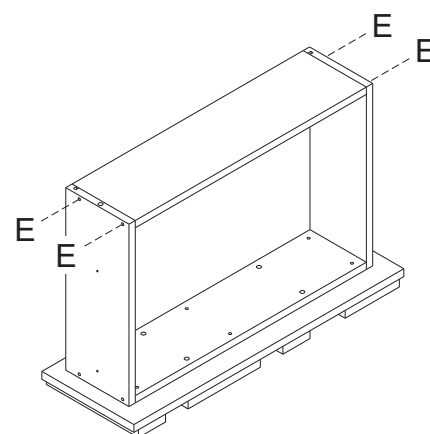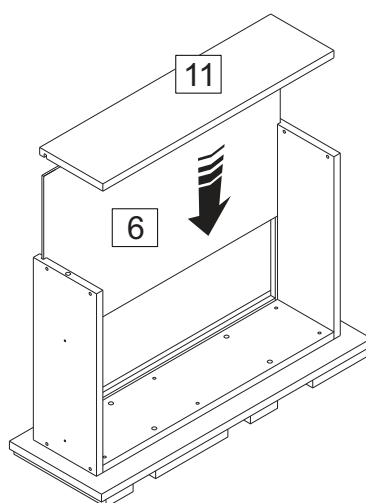

10






C x 8 PC



Kb x 4 PC

2x

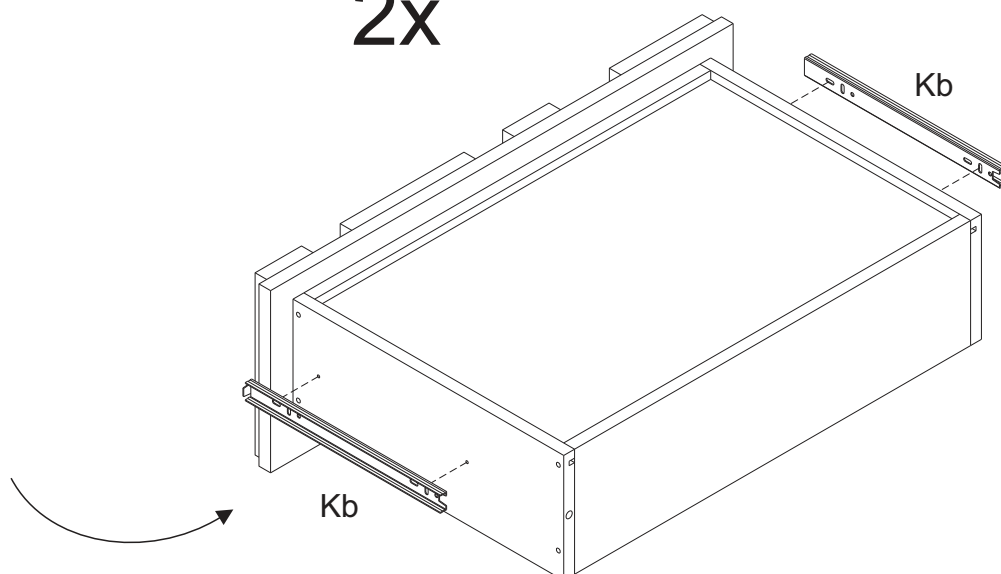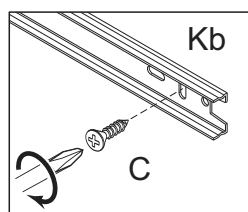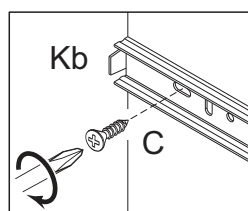

BANAK

SANDOLI

SD-0102RM

11

